

## Memory Card Recorder

### Operating Instructions

---

Getting Started

---

Recording

---

Listening

---

Erasing

---

About the Menu Function

---

Additional Information

---

Troubleshooting

---

Index

---

- The recorded music is limited to private use only. Use of the music beyond this limit requires permission of the copyright holders.
- Sony is not responsible for incomplete recording/ downloading or damaged data due to problems of the memory card recorder or computer.
- Depending on the types of the text and characters, the text shown on the memory card recorder may not be displayed properly on device. This is due to:
  - The capacity of the connected memory card recorder.
  - The memory card recorder is not functioning normally.
  - Content information is written in the language or the character that is not supported by the memory card recorder.

## For customers in Korea/China/ Europe

Do not install AC adaptor in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire or electric shock, do not expose the AC adaptor to dripping or splashing, and do not place objects filled with liquids, such as vases, on the AC adaptor.

As the main plug of AC adaptor is used to disconnect the AC adaptor from the mains, connect it to an easily accessible AC outlet. Should you notice an abnormality in it, disconnect it from the AC outlet immediately.

## Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential

negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Applicable accessory: SD memory card

## **Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)**



This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.

On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead.

By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only.

To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

## **Notice for the customers: the following information is only applicable to equipment sold in the countries applying EU directives**

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

To prevent possible hearing damage, do not listen at high volume levels for long periods.



## Notice for users

All rights reserved. This manual or the software described herein, in whole or in part, may not be reproduced, translated or reduced to any machine readable form without prior written approval from Sony Corporation.

IN NO EVENT SHALL SONY CORPORATION BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES, WHETHER BASED ON TORT, CONTRACT, OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL, THE SOFTWARE OR OTHER INFORMATION CONTAINED HEREIN OR THE USE THEREOF.

Sony Corporation reserves the right to make any modification to this manual or the information contained herein at any time without notice. The software described herein may also be governed by the terms of a separate user license agreement.

What you record is for personal enjoyment and use only. Copyright laws prohibit other forms of use without the permission of the copyright holders.

## Trademarks

- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- SD, SDHC microSD and microSDHC logos are trademarks of SD-3C, LLC.



All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. Furthermore, “™” and “®” are not mentioned in each case in this manual.

# Table of Contents

## Getting Started

Step 1: Checking the Contents of the Package .....	7
Index to parts and controls .....	8
Preventing unintentional operations (HOLD) .....	11
Maintaining the moderate volume level (European model only) .....	12
Step 2: Preparing a Power Source .....	13
When to replace/charge the batteries .....	14
Connecting the memory card recorder to a wall outlet .....	14
Step 3: Inserting a Memory Card .....	16
To remove a memory card .....	17
Step 4: Turning the Memory Card Recorder On .....	19
Turning the power on .....	19
Turning the power off .....	19
Step 5: Setting the Clock .....	20
Setting the clock using the menu .....	21
Step 6: Setting the Language to Be Used in the Display Window .....	22

## Recording

Starting to Record .....	24
To stop recording .....	25
Note while accessing .....	25
Recording via Other Devices .....	27
Recording with an external microphone .....	27
Recording from other equipment .....	28

## Listening

Starting Playback .....	30
Stopping the playback .....	31
Reviewing the current recording instantly .....	31
Other operations .....	31
Recording with other equipment .....	34

## Erasing

Erasing the File .....	35
Erasing the current recording instantly .....	37
Erasing all files in a recorded date box .....	37

## About the Menu Function

Making Settings for the Menu .....	38
Menu Settings .....	40

## Additional Information

Precautions .....	44
Specifications .....	47
Memory card recorder section .....	47
Battery life .....	49

## Troubleshooting

 
Troubleshooting .....	50
Message List .....	54
Display Window Guide .....	57
Index .....	59

# Step 1: Checking the Contents of the Package

### Memory card recorder (1)




### SD memory card (2GB) (1)



### AC adaptor\* (1)

AC-ES3010K2

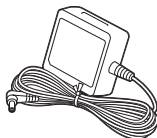

### LR03 (size AAA) alkaline batteries (2)

### Carrying pouch (1)

### Hand strap (1)

The strap is attached via the strap hole of the memory card recorder.

### Quick Start Guide

### Operating Instructions


The operating instructions are stored as PDF files in the supplied SD memory card with the memory card recorder.

\* The AC adaptor is supplied with Chinese/Korean/European model only.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

# Index to parts and controls

## Front

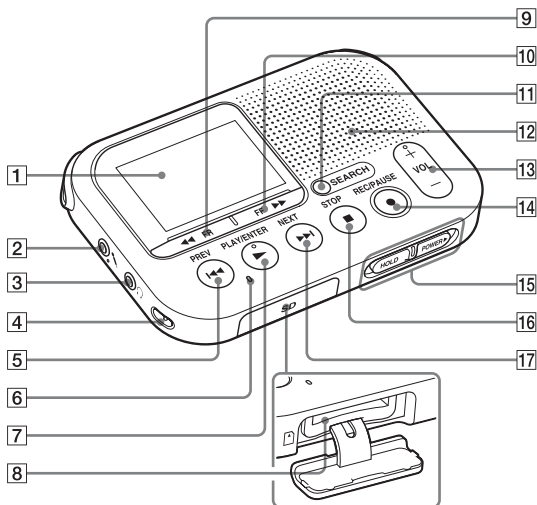

**1** Display window

**2** (microphone) jack\*1

**3** (headphone) jack\*2

**4** Strap hole\*3

**5** ◀◀ PREVIOUS button

**6** Memory card access indicator

**7** ▶▶ PLAY/ENTER\*1 button

**8** Memory card slot


**9** ◀◀ REWIND button

**10** ▶▶ FAST FORWARD button




- 11 SEARCH button
- 12 Speaker
- 13 VOL (volume) +\*1/- button
- 14 ● REC/PAUSE button  
(recording indicator)
- 15 HOLD•POWER switch
- 16 ■ STOP button
- 17 ►► NEXT buttons


\*1 These buttons and the jack have a tactile dot. Use it as a reference point for operations, or to identify each terminal.

\*2 Connect a stereo headphones (not supplied) to the  (headphone) jack. When noise is heard, clean the plug of the headphones.

\*3 The strap is attached via the strap hole when you purchase the memory card recorder.

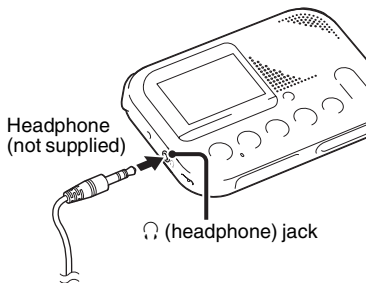

## Rear

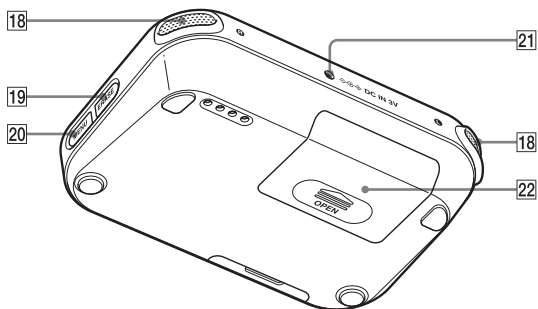

**18** Built-in microphones

**19** ERASE button

**20** MENU button


**21** DC IN 3V jack

**22** Battery compartment


## Preventing unintentional operations (HOLD)

You can disable all the buttons (HOLD) in order to prevent unintentional operations when you carry the memory card recorder while the power is on.

### To put the memory card recorder in the HOLD status

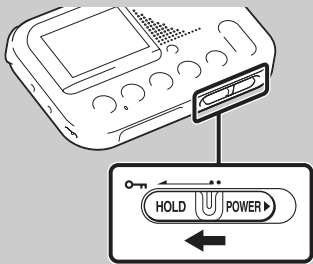


Slide the HOLD•POWER switch in the direction of “HOLD.”  
“HOLD” will appear for approximately 3 seconds, indicating that all the button operations are disabled.

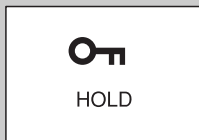

“HOLD. Slide HOLD Switch to Activate.” appears if you press any button when the HOLD function is activated.

### To release the memory card recorder from the HOLD status

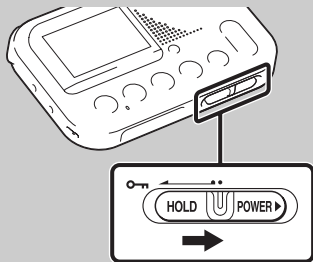

Slide the HOLD•POWER switch towards the center.


#### **Note**

When the HOLD function is activated during recording, all the button operations are disabled. To stop recording, cancel the HOLD function first.

## Maintaining the moderate volume level (European model only)

This unit limits the maximum volume to allows you to listen to the sound at a moderate volume level when using the headphones.

When you try to adjust the volume to a level that exceeds the specified level, “Check The Volume Level” message appears. Press ► PLAY/ENTER, then adjust the volume.

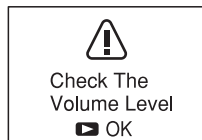


### **Note**


The volume is lowered automatically and the “Volume Lowered” message appears, if you do not lower the volume for specified period of time after the “Check The Volume Level” message appears.

## Step 2: Preparing a Power Source

- 1 Slide and lift the battery compartment lid.

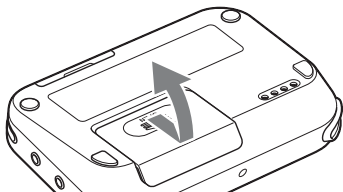

- 2 Insert LR03 (size AAA) alkaline batteries with correct polarity, and close the lid.

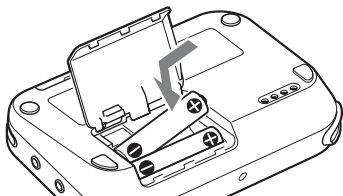

Be sure to insert the batteries with the  $\oplus$  and  $\ominus$  ends in the right position.

The clock setting window appears when you insert batteries for the first time, or

when you insert batteries after the memory card recorder has been without batteries for a certain period of time. See “Step 5: Setting the Clock” on page 20 to set the date and time.

### Tips

- When replacing the batteries, files recorded are not erased even when you remove the batteries.
- When replacing the batteries, the clock continues moving for about 20 days after you remove the batteries.

### The batteries you can use

- LR03 (size AAA) alkaline batteries
- NH-AAA-B2KN rechargeable batteries (not supplied)  
(You cannot charge the battery using the memory card recorder.)

### The batteries you cannot use

Manganese batteries

### Notes

- When replacing the batteries, be sure to replace both batteries with new ones.
- When you are not going to use the memory card recorder for a long time,


remove the batteries to prevent damage from battery leakage and corrosion.

- The remaining battery indicator is not displayed when you use an AC adaptor.


## When to replace/charge the batteries

The battery indicator in the display window shows the battery condition.


### Battery remain indicator

 : Replace the old batteries with new ones. Or charge rechargeable batteries.



 : “Low Battery” appears and the memory card recorder will stop operation.

## Connecting the memory card recorder to a wall outlet

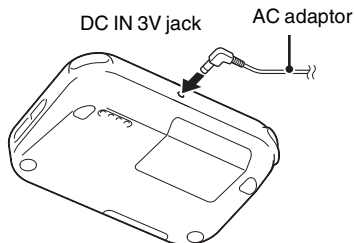

You can use the memory card recorder connected to a wall outlet via an AC adaptor.

This is useful for long time use without worrying about battery consumption. The batteries are not depleted, even if you use the memory card recorder with the batteries inserted, because the power is supplied via the AC adaptor.

### Note

Do not remove the memory card or batteries, or disconnect the AC adaptor while recording (the recording lamp lights up in red) or accessing the memory card

(the memory card access indicator is flashing in orange). Doing so may damage the data.

The “Please Wait” animation appears when there are a lot of files on the memory card. This is not a malfunction. Please wait until the animation disappears.

## For Chinese/Korean/European model

- 1 Insert the supplied AC adaptor securely into the DC IN 3V jack until it stops to the end.
- 2 Connect the supplied AC adaptor to a wall outlet.

 
## For other country/region model

- 1 Insert a commercially-available applicable AC adaptor securely into the DC IN 3V jack until it stops to the end.
- 2 Connect a commercially-available applicable AC adaptor to a wall outlet.

You can use an AC adaptor that supports:

- Output voltage: DC3V
- Output current: 1A

- Polarity of the plug



### Note

Operations of not all AC adaptors are supported.


## Step 3: Inserting a Memory Card

### **Note**


The memory card recorder does not have an internal memory. Be sure to insert the memory card before recording.

You cannot record if the write-protect switch on the memory card is set to write-protect.


Slide the write-protect switch in the direction of the arrow if the lock has not released.

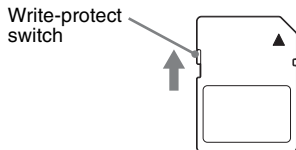

- 1 Open the cover of the memory card slot in the stop mode.

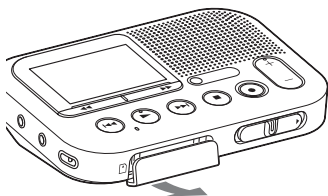


- 2 Insert a memory card securely to the end of the slot until it clicks into place.

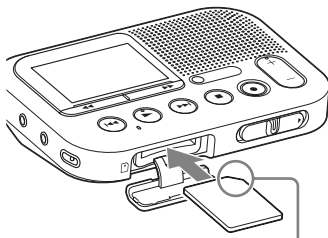

Check on the direction of the notched corner.



- 3** Close the cover of the memory card slot.

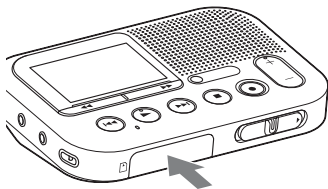

#### Note

The data may be damaged if the cover is closed when the memory card is not inserted correctly.

## To remove a memory card

Make sure the memory card access indicator is off, then push the memory card into the slot. When it pops out, remove it from the memory card slot.

#### Notes

- Do not insert or remove a memory card during recording/playback/formatting. Doing so may cause a malfunction of the memory card recorder.
- Do not remove a memory card while the “Please Wait” animation appears in the

display window. Doing so may damage the data.

- If a memory card is not recognized, remove it and then insert it into the memory card recorder again.
- Close the cover of the memory card slot firmly. Also, do not insert any liquid, metal, flammable or any object other than a memory card into the slot. Doing so may cause fire, electric shock, or malfunctions.

## About compatible memory cards

You can use a commercially available SD/SDHC/microSD/microSDHC memory card with the memory card recorder.

Although, operations of all types of compatible memory cards are not guaranteed.

Memory card	compatible
SD memory card	○
SDHC memory card	○
SDXC memory card	×
microSD memory card	○
microSDHC memory card	○

In this manual, SD memory card and microSD memory cards are generally referred to as a “memory card.”

The SD memory card slot is referred to as the “memory card slot.”

Due to the file system specifications of the memory card recorder, you can record and play back a file smaller than 1 GB (You can record for approximately 11 hours and 10 minutes of audio when you record with the memory card recorder.) using a memory card.


You can record up to 4,074 files on an memory card media.

#### **Note**

- An adaptor is needed to use a microSD or microSDHC memory card.
- Memory cards of 64 MB or less or more than 32 GB are not supported.

## Step 4: Turning the Memory Card Recorder On

### Turning the power on

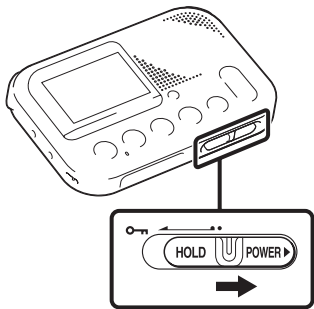


Slide the HOLD•POWER switch in the direction of “POWER” and keep it there until the opening animation appears.



### Turning the power off


Slide the HOLD•POWER switch in the direction of “POWER” and keep it there until “Power Off” animation appears. The memory card recorder will turn off in a few seconds.

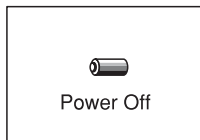

### 💡 Tips

- When you are not going to use the memory card recorder for a long time, we recommend to turn off the memory card recorder.
- When the memory card recorder is in the stop mode, and you leave the memory card recorder without attempting an operation for approx. 30 minutes, the auto power off function will take effect (auto power off).

## Step 5: Setting the Clock

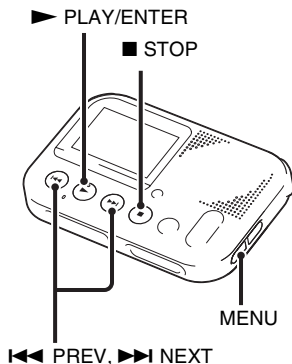

You can record the recording date after setting the clock. This allows you to use the date search function, then easily find the recorded files using the date they were recorded after recording.

If you do not set the clock, recorded file is labeled “No Date Info.” This may make it difficult to find the desired file. When you insert batteries for the first time, or when you insert batteries after the memory card recorder has been

without batteries for more than 20 days, the “Set Date & Time ? Set to Search by Date” message appears. Select “YES” by pressing ◀◀ PREV or ▶▶ NEXT, then press ► PLAY/ENTER. The year section is selected with the cursor in the clock setting window.

Set the clock as follows:

### 1 Set the year.

Press ◀◀ PREV or ▶▶ NEXT to set the year, and then press ► PLAY/ENTER.



When you press ► PLAY/ENTER, the cursor moves to the month section.


### 2 Set the month, day, hour, and minute in sequence in the same way.

Press **◀◀** PREV or **▶▶** NEXT to select the desired figures, and then press **▶** PLAY/ENTER.

You can return to the previous window by pressing MENU if you make a mistake in the clock settings.



When you set the minute, the “Setting Completed” message appears.

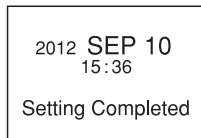

### **Note**

If you do not press **▶** PLAY/ENTER within 1 minute of entering the clock setting data, the clock setting mode is canceled and the stop mode window will be displayed.

## **To display the current date and time**

While the memory card recorder is in the stop mode, press **■** STOP to display the current date and time for about 3 seconds.




## **Setting the clock using the menu**

While the memory card recorder is in the stop mode, you can set the clock using the menu.


Press MENU to enter the menu mode. Then select “Date&Time” to set the clock (page 41).

## Step 6: Setting the Language to Be Used in the Display Window

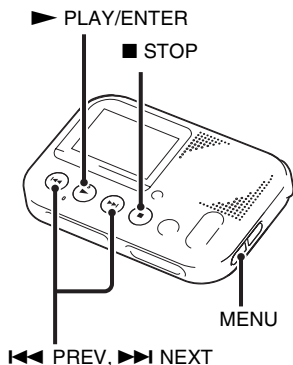


You can select the language to be used for messages, menus, etc. from some languages.


- 1 Press **MENU** to enter the menu mode.  
The menu mode window will be displayed.

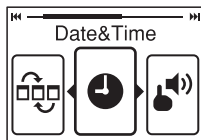

- 2 Press **PREV** or **NEXT** to select "Language," and then press **PLAY/ENTER**.

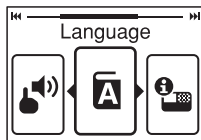


- 3 Press **PREV** or **NEXT** to select the language that you want to use, and then press **PLAY/ENTER**.

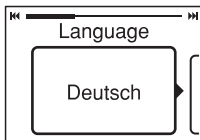

The language you can select depends on the country or region where you purchased the memory card recorder. Refer to “Language” on page 42.

- 4** Press ■ STOP to exit the menu mode.

## Starting to Record

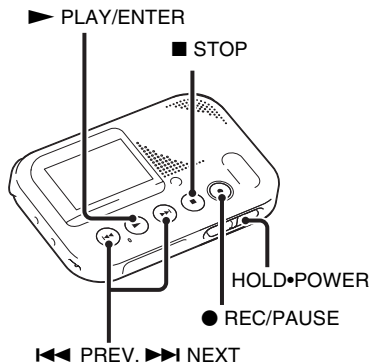

You can record a new file by pressing the ● REC/PAUSE button. Recorded files are not erased. The recording level is set automatically. You can also review the latest recording file by just pressing the ► PLAY/ENTER button without the rewind operation.

### Notes

- Before making a recording, be sure to check the battery indicator (page 14).

- Noise may be recorded if an object, such as your finger, etc., accidentally rubs or scratches the memory card recorder during recording.
- Do not remove the memory card while recording.
- The “Start Recording” message appears when you insert a blank memory card.

### Tips

- Before you start recording, we recommend you make a trial recording first, or monitor the recording.
- Try to record closer to the sound source if the playback volume is low.

- Slide the HOLD•POWER switch towards the center to release the memory card recorder from the HOLD status (page 11). The stop mode window appears.






- 2 Place the memory card recorder so that the built-in microphones face the direction of the source to be recorded.



- 3 Press **● REC/PAUSE** in the stop mode.

The recording indicator lights in red. You do not need to press and hold **● REC/PAUSE** while recording. The new file will be automatically recorded after the last recorded file.

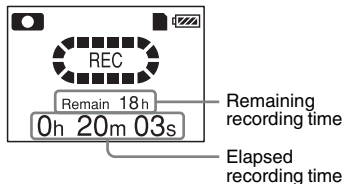


## To stop recording

Press **■ STOP**.

The “Please Wait” animation appears and the memory card recorder stops at the beginning of the current recording file.

You can find the recorded file using the date search function (page 30) for playback later.

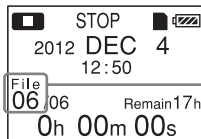

The number of the recorded file (in the sequence of files that were recorded on the same day)

## Note while accessing

The memory card recorder is recording data and storing it on the memory card when the “Please Wait” animation appears in the display window or the memory card access indicator flashes in orange. While the memory card recorder is accessing data, do not remove the memory card, or turn off the memory card recorder. Doing so may damage the data.

## To pause recording

Press ● REC/PAUSE. During recording pause, the recording indicator flashes in red and the display of the elapsed time of the current recording and the icon of the recording pause flashes in the display.


Press ● REC/PAUSE again to release pause and resume recording. One hour after you pause recording, recording pause is automatically released and the memory card recorder enters the stop mode.

### Tip

Files recorded using this memory card recorder will be recorded as MP3 files.

# Recording via Other Devices

## Recording with an external microphone

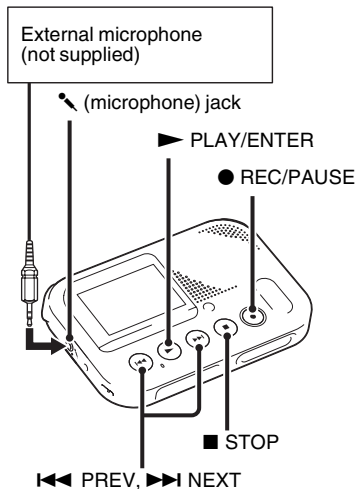


- 1 Connect an external microphone (not supplied) to the (microphone) jack when the memory card recorder is in the stop mode.

“Select Input” appears in the display window.

If “Select Input” is not displayed, set it in the menu (page 42).

- 2 Press **PREV** or **NEXT** to select “MIC IN,” and then press **PLAY/ENTER**.

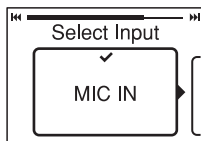

“Select Input” is set to “MIC IN” when you purchase the memory card recorder.


- 3 Press **STOP** to exit the menu mode.
- 4 Press **REC/PAUSE** to start recording.

The built-in microphones are automatically cut off, and the memory card recorder starts recording sounds from the external microphone.

When a plug in power type microphone is connected, power is automatically supplied to the microphone from the memory card recorder.


**5** Press **■ STOP** to stop recording.

## Recording from other equipment

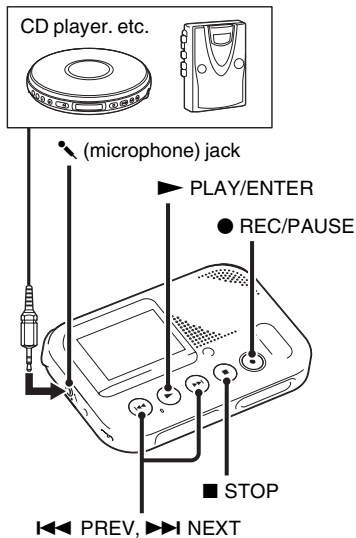


You can make MP3 files without using the computer by recording sound from other equipment connected to the memory card recorder.




## 💡 Tips


- Before you start recording, we recommend you make a trial recording first.
- If the input level is not strong enough, connect the headphone jack (minijack, stereo) of other equipment to the  (microphone) jack of the memory card recorder and adjust the volume level on the piece of equipment connected to the memory card recorder.

- 1 Connect other equipment to the memory card recorder when the memory card recorder is in the stop mode.




Connect the audio output connector (stereo mini-plug) of other equipment to the  (microphone) jack of the memory card recorder using an audio connecting cable (not supplied).

“Select Input” appears in the display window. If “Select Input” is not displayed, set it in the menu (page 42).

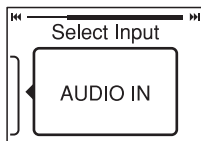
- 2 Press  PREV or  NEXT to select “AUDIO IN,” and then press  PLAY/ENTER.



“Select Input” is set to “MIC IN” when you purchase the memory card recorder.


- 3 Press  STOP to exit the menu mode.
- 4 Press  REC/PAUSE to start recording.  
The built-in microphones are automatically cut off and the memory card recorder starts recording sounds from the connected equipment.
- 5 Start playback on the piece of equipment connected to the memory card recorder.
- 6 Press  STOP to stop recording.

## Starting Playback

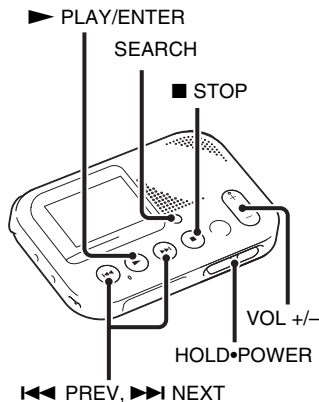


- 1 Slide the HOLD•POWER switch towards the center to release the memory card recorder from the HOLD status (page 11).  
The stop mode window appears.

- 2 Press SEARCH to display the date selection screen.

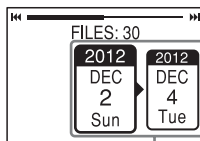

The recorded date box


- 3 Press ◀◀ PREVIOUS or ▶▶ NEXT to select the date when you recorded the desired file, then press ▶ PLAY/ENTER.

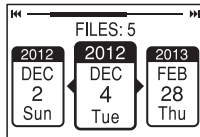

### 💡 Tips

- Go to step 5 if only one file is shown in the selected recorded date box.
- A file, labeled without a date, is stored in the "No Date Info" box. MP3 files recorded on other devices are stored in the "♪" box. And podcast files recorded on other devices are stored in "📶".

- 4 Press **◀◀** PREV or **▶▶** NEXT to select a file.

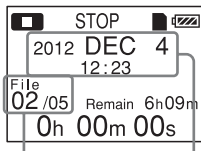


The number of the recorded file/the total number of files that were recorded on the same date as the file currently selected.

Press **▶▶** NEXT to select a more recent file.

Press **◀◀** PREV to select an earlier file.

- 5 Press **▶** PLAY/ENTER. Playback will start soon.

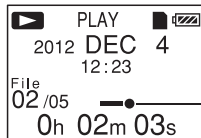

- 6 Press VOL +/- to adjust the volume.

## Stopping the playback

Press **■** STOP.



## Reviewing the current recording instantly

Press **▶** PLAY/ENTER after you stop the recording.

Playback starts from the beginning of the file just recorded.

## Other operations

### To stop at the current position

Press **■** STOP.

To resume playback from that point, press **▶** PLAY/ENTER.

### To go back to the beginning of the current file

Press **◀◀** PREV once.

To go back to previous files, press **◀◀ PREV** repeatedly. (During the stop mode, keep the button pressed to go back through the files continuously.) A beep sounds 3 times when the memory card recorder reaches the beginning of the first file if you have been pressing and holding **◀◀ PREV**. You cannot go back any further.

### To skip to the next file


 
Press **▶▶ NEXT** once.

To skip to succeeding files, press **▶▶ NEXT** repeatedly. (During the stop mode, keep the button pressed to skip through the files continuously.) A beep sounds 3 times when the memory card recorder reaches the beginning of the last file by pressing and holding **▶▶ NEXT**. You cannot skip though the files any further.

### Tip

The beep does not sound if you select “OFF” for “Beep” in the menu.

### Listening with better sound quality

- To listen with headphones:  
Connect the stereo headphones (not supplied) to the  (headphone) jack. The built-in speaker will be automatically disconnected.
- To listen from an external speaker:  
Connect an active or passive speaker (not supplied) to the  (headphone) jack.

### Searching forward/backward during playback (cue/review)

- To search forward (cue):  
Press and hold **▶▶ FF** during playback and release it at the point you wish to resume playback.
- To search backward (review):  
Press and hold **◀◀ FR** during playback and release it at the point you wish to resume playback.


The memory card recorder searches at slow speed with playback sound. This is useful to check one word forward or back. Then, if you press and hold the button, the memory card recorder starts to search at higher speed.



## 💡 When files are played back to the end of the last file

When you play back or fast play back to the end of the last file, “END” lights up for approx. 5 seconds.

### About the display

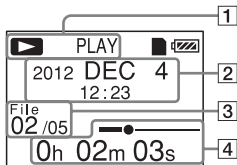

- 1 The status of the memory card recorder  
Displays the status of the memory card recorder with icon and characters.
- 2 The recording start date  
Displays the recording start date.

### 💡 Tip


When a file that was recorded on another device is selected, the folder name is displayed on the 1st line and the file name is displayed on the 2nd line.

- 3 File information  
The number of the recorded file (in


the sequence of files that were recorded on the same day)/Displays the total number of files that were recorded on the same date as the file currently selected.


- 4 The elapsed playback time/bar for the current file  
Displays the elapsed playback time and bar for the current file.

## Recording with other equipment

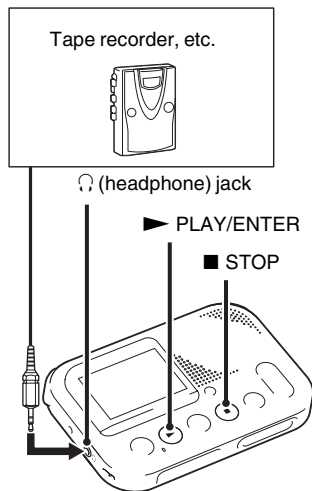


You can record the sound of the memory card recorder with other equipment. Before you start recording, we recommend you make a trial recording first.

**1** Connect the  (headphone) jack of the memory card recorder to the external input terminal of other equipment using an audio connecting cable (not supplied).

**2** Press  PLAY/ENTER to start playback and at the same time set the connected equipment to the recording mode.


A file from the memory card recorder will be recorded on the equipment connected.

**3** Press the stop button on the connected equipment, then press  STOP on the memory card recorder to stop recording.

### Tip

If the recorded sound has dropouts, or the volume of the recorded sound is too small, adjust the playback sound of the memory card recorder (page 31).

# Erasing the File

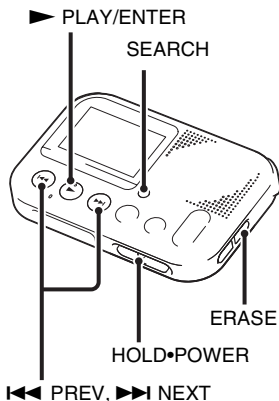

## Notes

- Once a recording has been erased, you cannot retrieve it.
- Do not remove the memory card, or turn off the memory card recorder while erasing a file.


**1** Slide the HOLD•POWER switch towards the center to release the

memory card recorder from the HOLD status (page 11).

The stop mode window appears.




**2** Press SEARCH to display the date selection screen.

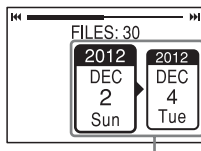

The recorded date box


**3** Press ◀◀ PREV or ▶▶ NEXT to select the date when you recorded the desired file, then press ▶ PLAY/ENTER.

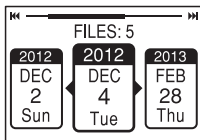

### Tips

- Go to step 5 if only one file is shown in the selected recorded date box.
- A file, labeled without a date, is stored in the “No Date Info” box. MP3 files recorded on other devices are stored in the “🎵” box. And podcast files recorded on other devices are stored in “📻.”

- 4** Press **⏮** PREV or **⏭** NEXT to select a file.

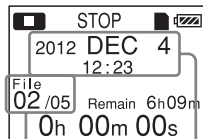

The number of the recorded file/the total number of files that were recorded on the same date as the file currently selected.

Recording start date


Press **⏭** NEXT to select a more recent file.

Press **⏮** PREV to select an earlier file.

- 5** Press ERASE.

“Erase?” appears and the specified file is played back for confirmation.

- 6** Press **⏮** PREV or **⏭** NEXT to select “YES.”

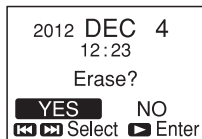

- 7** Press **▶** PLAY/ENTER.

The “Erasing...” animation appears in the display window and the selected file will be erased.

When a file is erased, the remaining files will advance so that there will be no space between files.



The 2nd file has been erased and the following files have had their numbers reduced by 1. The total number of files in the recorded date box is reduced from 5 to 4.

## To cancel erasing

Select “NO” in step 6 of “Erasing the File,” and then press ► PLAY/ENTER.

## To erase another file

Proceed with steps 2 through 7 in “Erasing the File.”

## Erasing the current recording instantly

- 1 Press ERASE after you stop the recording.  
“Erase?” appears and the specified file is played back for confirmation.
- 2 Press ◀◀ PREV or ▶▶ NEXT to select “YES.”


- 3 Press ► PLAY/ENTER.

The “Erasing...” animation appears in the display window and the selected file will be erased.


## Erasing all files in a recorded date box

- 1 Press ◀◀ PREV or ▶▶ NEXT in step 2 of “Erasing the File” to select the date that you want, then press ERASE.
- 2 Press ◀◀ PREV or ▶▶ NEXT to select “YES.”
- 3 Press ► PLAY/ENTER.  
The “Erasing...” animation appears in the display window and all files in the selected box will be erased.


# Making Settings for the Menu

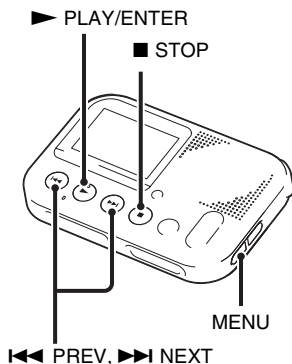


- 1** Press **MENU** to enter the menu mode.  
The menu mode window will be displayed.

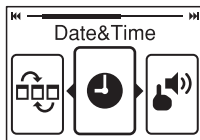

- 2** Press **◀◀ PREV** or **▶▶ NEXT** to select the menu item for which you want to make setting, and then press **▶ PLAY/ENTER**.

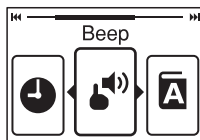

- 3** Press **◀◀ PREV** or **▶▶ NEXT** to make the setting, and then press **▶ PLAY/ENTER**.

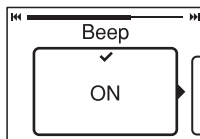

- 4** Press **■ STOP** to exit the menu mode.

### Note

If you do not press any button for 60 seconds, the menu mode is automatically

canceled and the window will return to the normal display.

### **To return to the previous window**

During menu operations, press MENU.

### **To exit the menu mode**



Press ■ STOP.

# Menu Settings

Menu items	Operation mode (○: the setting can be made / —: the setting cannot be made)		
	Stop mode	Playback mode	Recording mode
Re-Sort by Date	○	—	—
Date&Time	○	—	—
Beep	○	—	—
Language	○	—	—
System Information	○	—	—
Select Input	○	—	—
Format	○	—	—



Menu items	Settings (*: Initial setting)	See page
<b>Re-Sort by Date</b>	<p>Cleans up the memory card to use the data area more efficiently, and sorts files in order by date. Perform this operation after repeated recording or erasing files stored on the memory card in the memory card recorder.</p> <ol style="list-style-type: none"> <li>① Press MENU to enter the menu mode, then select “Re-Sort by Date” using ◀◀ PREV or ▶▶ NEXT and ► PLAY/ENTER. A confirmation screen appears.</li> <li>② Press ◀◀ PREV or ▶▶ NEXT to select “YES,” then press ► PLAY/ENTER. “Re-Sorting...” appears. “Re-Sorting Completed” appears when the re-sorting has completed.</li> </ol> <p><b>■ Notes</b></p> <ul style="list-style-type: none"> <li>• It may take a few minutes to finish re-sorting the data.</li> <li>• Do not remove the memory card, or turn off the memory card recorder while re-sorting.</li> <li>• “Could Not Erase Some Files” is displayed after step ② if there was data that could not be re-sorted.</li> </ul>	—
<b>Date&amp;Time</b>	<p>Set the clock to record the recording date and use the date search function.</p> <ol style="list-style-type: none"> <li>① Press MENU to enter the menu mode. Select “Date&amp;Time” using ◀◀ PREV or ▶▶ NEXT and ► PLAY/ENTER.</li> <li>② Set the clock using ◀◀ PREV or ▶▶ NEXT and ► PLAY/ENTER. When you set the minute, the “Setting Completed” message appears, then the screen display returns to the menu screen.</li> </ol>	20

Menu items	Settings (*: Initial setting)	See page
<b>Beep</b>	<p>Sets whether a beep will be heard or not.</p> <p>ON*: A beep will sound to indicate that an operation has been accepted or an error has occurred.</p> <p>OFF: No beep sound will be heard.</p>	—
<b>Language</b>	<p>Sets the language to be used for messages, menus, recorded date box, etc.</p> <p>Deutsch (German), English, Español (Spanish), Français (French), Italiano (Italian), Русский (Russian), 日本語 (Japanese), 한국어 (Korean), 简体中文 (Chinese), 繁體中文 (Chinese), ไทย (Thai)</p> <p> <b>Tip</b></p> <p>Number of selectable language options and the default setting differ depending on the area you purchased your memory card recorder.</p>	22
<b>System Information</b>	<p>The following system information is displayed.</p> <p>Model name, software version of the memory card recorder.</p>	—
<b>Select Input</b>	<p>Selects the external input to be recorded that is connected to  (microphone) jack.</p> <p>MIC IN*: Select when you record files using an external microphone.</p> <p>Audio IN: Select when you record using other equipment.</p>	27, 28

Menu items	Settings (*: Initial setting)	See page
<b>Format</b>	<p>Formats the memory card currently inserted to the memory card recorder, erasing all the data in the memory card. If you are using a memory card with the memory card recorder for the first time, we recommend that you format the memory card first. Format the memory card if the “Format Error” message or the “Process Error” message appears.</p> <p>YES:</p> <p>The “Formatting...” animation appears and the memory media will be formatted.</p> <p>NO*:</p> <p>The memory media will not be formatted.</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>• Use the memory card recorder formatting function to format the memory card.</li> <li>• When you format the memory card, all the data which you have stored on the memory card recorder will be erased. Once the memory card has been erased, you cannot retrieve the data that was erased.</li> <li>• When you format the supplied SD memory card, the operating instructions stored in the supplied SD memory card will also be erased. To get another copy of the operating instructions, please visit the Sony support home page depending on your area:  For customers in Europe:  <a href="http://support.sony-europe.com/DNA">http://support.sony-europe.com/DNA</a>  For customers in other countries/regions:  <a href="http://www.sony-asia.com/support">http://www.sony-asia.com/support</a></li> </ul>	–

# Precautions

### On power

Operate the unit only on 3.0 V or 2.4 V DC. Use two LR03 (size AAA) alkaline batteries or two NH-AAA rechargeable batteries, or connect DC IN 3V jack to a wall outlet using an AC adaptor.

### On safety

Do not operate the unit while driving, cycling or operating any motorized vehicle.

### On handling

- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Should any solid object or liquid fall into the unit, remove the batteries and have the unit checked by qualified personnel before operating it any further.
- Be careful not to allow water to splash on the unit. The unit is not water-proof. In particular, be careful in the following situations.

- When you have the unit in your pocket and go to the bathroom, etc. When you bend down, the unit may drop into the water and may get wet.
- When you use the unit in an environment where the unit is exposed to rain, snow, or humidity.
- In circumstances where you get sweaty. If you touch the unit with wet hands or if you put the unit in the pocket of sweaty clothes, the unit may get wet.

- You may feel pain in your ears if you use the headphones when the ambient air is very dry. This is not because of a malfunction of the headphones, but because of static electricity accumulated in your body. You can reduce static electricity by wearing non-synthetic clothes that prevent the emergence of static electricity.

### On noise

- Noise may be heard when the unit is placed near, a fluorescent lamp or a

- mobile phone during recording or playback.
- Noise may be recorded when an object, such as your finger, etc., rubs or scratches the unit during recording.

## On maintenance

To clean the exterior, use a soft cloth slightly moistened in water. Then use a soft dry cloth to wipe the exterior. Do not use alcohol, benzine or thinner.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

## On the AC adaptor

- Connect the AC adaptor to an easily accessible wall outlet close by. If trouble occurs while using the adaptor, immediately shut off the power by disconnecting the plug from the wall outlet.
- Do not use the AC adaptor placed in a narrow space, such as between a wall and furniture.



- To reduce the risk of electrical shock, avoid placing the AC adaptor in a location subject to humidity.

## On using a memory card


### ■ Notes

- Format the memory card if the “Format Error” message or the “Process Error” message appears.
- When formatting (initializing) a memory card, make sure to use the memory card recorder to format it. Operations of the memory cards formatted with Windows or other devices are not guaranteed.
- Format the memory card if you are using it with the memory card recorder for the first time.
- If you format a memory card containing recorded data, the recorded data will be deleted. Be careful not to delete important data.
- Do not leave a memory card within the reach of small children. They might accidentally swallow it.
- Do not insert or remove a memory card during recording/playback/formatting. Doing so may cause a malfunction of the memory card recorder.
- Do not remove a memory card while the “Please Wait” animation appears in the display window or the memory card

access indicator is flashing in orange.  
Doing so may damage the data.

- We do not guarantee the operations of all types of compatible memory cards with the memory card recorder.
- You cannot use a ROM (read-only-memory) type or write-protected memory card. Slide the write-protect switch in the direction of the arrow when you want to release the lock on the memory card.

Write-protect  
switch

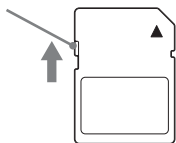

- Data may be corrupted in the following cases:
  - When a memory card is removed or the memory card recorder is turned off during a read or write operation.
  - When a memory card is used in locations subject to static electricity or electrical noise.
- We assume no responsibility for any loss or damage of recorded data.
- We recommend that you save a backup copy of the important data.
- Do not touch the terminal of a memory card with your hand or a metal object.

- Do not strike, bend or drop a memory card.
- Do not disassemble or modify a memory card.
- Do not expose a memory card to water.
- Do not use a memory card under the following conditions:
  - Locations beyond the required operating conditions, including locations, such as the hot interior of a car parked in the sun and/or in the summer, the outdoors exposed to direct sunlight, or a place near a heater.
  - Humid locations or locations with corrosive substances present.
- When using a memory card, make sure to check the correct insertion direction into the memory card slot.

# Specifications

## Memory card recorder section

### Note

This memory card recorder does not have an internal memory. You must insert a memory card to record a file.

### Frequency range

75 Hz - 20,000 Hz

### Recording format

Audio compression format (codec): MP3

Bit rate: 192 kbps

Sampling frequency: 44.1 kHz

File extension: .mp3

### Formats that can be played back

Audio compression format (codec): MP3\*1

Bit rate: 32 kbps - 320 kbps, VBR

Sampling frequencies: 16 kHz/  
22.05 kHz/24 kHz/32 kHz/44.1 kHz/  
48 kHz

File extension: .mp3\*1

### Speaker

Approx. 36 mm dia.

### Input/Output

- Microphone jack (minijack, stereo)
  - input for plug in power, minimum input level 1.0 mV
- DC IN 3V jack
- SD memory card slot
- Headphone jack (minijack, stereo)
  - output for 16 ohms - 300 ohms impedance headphones

### Rated power consumption

780 mW

### Power output

330 mW

### Power requirements

Two LR03 (size AAA) alkaline batteries (supplied): 3.0 V DC

DC 3.0 V: When using the AC adaptor\*2

Two NH-AAA-B2KN rechargeable batteries (not supplied): 2.4 V DC

### Operating temperature

5°C - 35°C

Dimensions (w/h/d) (not incl. projecting parts and controls) (JEITA)\*3

Approx. 116 mm × 28.5 mm × 78 mm

## Mass (JEITA)\*3

Approx. 145 g including two LR03 alkaline batteries

\*1 Not all encoders are supported.

\*2 The AC adaptor is supplied with Chinese/  
Korean/European model only.

\*3 Measured value by the standard of JEITA  
(Japan Electronics and Information  
Technology Industries Association)

Capacity of the supplied SD memory  
card with the memory card recorder  
(User available capacity)

2 GB

(approx. 1.80 GB = 1,932,734,976 Byte)

A part of the memory capacity is used as a  
management area.

## Supplied accessories

See page 7.

## Optional accessories

Audio connecting cable

RK-G136, RK-G139 (Except China/  
Europe)

Headphone

MDR-EX Series such as MDR-EX60LP

Battery charger

For Europe, Other country/region:

BCG-34HSN

For Korea: BCG-34HSSN

Rechargeable battery

NH-AAA-B2KN (Except China)

Compact charger & 2-pc AAA Multi-Use  
Premium batteries  
BCG-34HS2KAN (Except China)

Design and specifications are subject to  
change without notice.



## Maximum recording time\*1\*2

The maximum recording time of all the folders is as follows.

SD memory card				
2 GB	4 GB	8 GB	16 GB	32 GB
22 hr. 20 min.	44 hr. 40 min.	89 hr. 25 min.	178 hr.	357 hr.

(hr.: hours/min.: minutes)

\*1 When you are going to record continuously for a long time, you may have to replace the batteries with new ones in the midst of recording. For details on the battery life, see the next table.

\*2 The maximum recording time in the above table is for your reference only, and may differ depending on the card specifications.

## Battery life

### When using Sony LR03 (SG) (size AAA) alkaline batteries\*1

Recording	Playback through speaker*2	Playback using the headphones
32 hr.	13 hr.	31 hr.

(hr.: hours)

### When using Sony NH-AAA-B2KN rechargeable batteries\*1

Recording	Playback through speaker*2	Playback using the headphones
22 hr.	10 hr.	20 hr.

(hr.: hours)

\*1 The battery life is measured in testing using methods proprietary to Sony. The battery life may shorten depending on how you operate the memory card recorder.

\*2 When playing back music through the internal speaker with the volume level set to 14

# Troubleshooting

Before taking the memory card recorder for repair, check the following sections. Should any problem persist after you have made these checks, consult your nearest Sony dealer.

Please access the following support home page to get the support Information about your memory card recorder:

For customers in Europe:

<http://support.sony-europe.com/DNA>


For customers in other countries/regions:

<http://www.sony-asia.com/support>

Please note that recorded files may be deleted during service or repair work.

Symptom	Remedy
Noise is heard.	<ul style="list-style-type: none"><li>• An object, such as your finger, etc., accidentally rubbed or scratched the memory card recorder during recording so that noise was recorded.</li><li>• The memory card recorder was placed near a fluorescent lamp or a mobile phone during recording or playback.</li><li>• The plug of the connected microphone is dirty. Clean the plug.</li><li>• The plug of the connected headphones is dirty. Clean the plug.</li><li>• Noise may be heard during recording pause of a file.</li></ul>

Symptom	Remedy
The memory card recorder cannot be turned off.	<ul style="list-style-type: none"> <li>• Slide the <b>HOLD•POWER</b> switch in the direction of “POWER” and keep it there until “Power Off” animation appears (page 19).</li> </ul>
The memory card recorder cannot be turned on.	<ul style="list-style-type: none"> <li>• The power to the memory card recorder is off. Slide the <b>HOLD•POWER</b> switch in the direction of “POWER” and keep it there until the opening animation appears (page 19).</li> <li>• The batteries have been inserted with incorrect polarity (page 13).</li> <li>• Insert the new batteries (page 13).</li> <li>• Take out the batteries and insert them again.</li> </ul>
The memory card recorder does not operate correctly.	<ul style="list-style-type: none"> <li>• Take out the batteries and insert them again.</li> </ul>
It takes a long time for the memory card recorder to start.	<ul style="list-style-type: none"> <li>• If the memory card recorder is required to process a large amount of data, it may take longer for the memory card recorder to start. This is not a malfunction of the memory card recorder. Wait until the start-up display disappears.</li> </ul>
The memory card recorder does not operate.	<ul style="list-style-type: none"> <li>• You may have formatted memory card using the computer. Use the memory card recorder formatting function to format the memory card (page 43).</li> </ul>
The memory card recorder does not operate, even if you press any button.	<ul style="list-style-type: none"> <li>• The batteries are weak (page 14).</li> <li>• The power to the memory card recorder is off. Slide the <b>HOLD•POWER</b> switch in the direction of “POWER” and keep it there until the opening animation appears (page 19).</li> <li>• The HOLD function is activated. Slide the <b>HOLD•POWER</b> switch in the center direction (page 11).</li> </ul>

<b>Symptom</b>	<b>Remedy</b>
No sound comes from the speaker.	<ul style="list-style-type: none"> <li>• The volume is turned down completely (page 31).</li> <li>• Headphones are plugged in (page 32).</li> </ul>
Sound comes from the speaker even when the headphones are plugged in.	<ul style="list-style-type: none"> <li>• If you plug in the headphones not securely during playback, the sound may come from the speaker. Unplug the headphones, and then insert them securely.</li> </ul>
“Memory Full” is displayed and you cannot start recording.	<ul style="list-style-type: none"> <li>• The memory card is full. Erase unnecessary files (page 35), and then perform “Re-Sort by Date,” or insert a new memory card.</li> </ul>
“File Full” is displayed and you cannot operate the memory card recorder.	<ul style="list-style-type: none"> <li>• Erase unnecessary files (page 35), and then perform “Re-Sort by Date,” or insert a new memory card.</li> </ul>
You cannot record a file.	<ul style="list-style-type: none"> <li>• The remaining memory capacity is insufficient.</li> </ul>
The playback volume is low.	<ul style="list-style-type: none"> <li>• The volume is turned down completely. Press VOL + or – to adjust the volume (page 31).</li> <li>• Record closer to the sound source if possible.</li> </ul>
The playback volume is low. “Volume Lowered” is displayed.*	<ul style="list-style-type: none"> <li>• The volume of the playback sound is lowered automatically if you do not lower the volume for specified period of time after the “Check The Volume Level” message appears.</li> </ul>
When recording from other equipment, the input level is too strong or not strong enough.	<ul style="list-style-type: none"> <li>• Connect the headphone jack of other equipment to the  (microphone) jack of the memory card recorder and adjust the volume level on the piece of equipment connected to the memory card recorder.</li> </ul>
The memory card is not recognized.	<ul style="list-style-type: none"> <li>• Remove a memory card. Then insert it with correct side and direction.</li> </ul>
“---- --” “--:--” is displayed on the recording start date display.	<ul style="list-style-type: none"> <li>• The date of recording will not be displayed if you recorded the file when the clock was not set.</li> </ul>

Symptom	Remedy
The battery life is short.	<ul style="list-style-type: none"><li>• The battery life on page 49 is based on playback with the volume level set to 14. The battery life may shorten depending on the operation of the memory card recorder.</li></ul>
There is no battery power remaining after you have left the batteries inserted for long time without using the memory card recorder.	<ul style="list-style-type: none"><li>• Even if you do not use the memory card recorder, the batteries are consumed slightly. If you do not intend to use the memory card recorder for an extended period of time, it is recommended that you turn the power off (page 19) or remove the batteries.</li></ul>
A character in a folder or file name is displayed in unreadable characters.	<ul style="list-style-type: none"><li>• The memory card recorder cannot support or display some special characters and symbols that are entered on a computer using Windows Explorer or the Macintosh desktop.</li></ul>
The “Please Wait” animation display does not disappear.	<ul style="list-style-type: none"><li>• If the memory card recorder is required to process excessive amount of data, the animation may be displayed for an extended period of time. This is not a malfunction of the memory card recorder. Wait until the message disappears.</li></ul>

\* European model only.

# Message List

Message	Cause/Remedy
HOLD. Slide HOLD Switch to Activate.	<ul style="list-style-type: none"><li>• All the button operations are disabled because the memory card recorder is in the HOLD status to prevent unintentional operations. Slide the HOLD•POWER switch towards the center to release the memory card recorder from the HOLD status (page 11).</li></ul>
Low Battery	<ul style="list-style-type: none"><li>• The batteries are exhausted. Replace the old LR03 (size AAA) alkaline batteries with new ones (page 13).</li></ul>
Memory Card Error	<ul style="list-style-type: none"><li>• An error occurred while a memory card was being inserted into the memory card slot. Remove and try inserting it again. If this message persists, use a new memory card.</li></ul>
Memory Card Not Supported	<ul style="list-style-type: none"><li>• A memory card that the memory card recorder does not support is inserted. See “About compatible memory cards” on page 17.</li></ul>
Memory Card Locked	<ul style="list-style-type: none"><li>• The memory card is write-protected. A write-protected memory card cannot be used with the memory card recorder.</li></ul>
Read Only Memory Card	<ul style="list-style-type: none"><li>• A read-only memory card is inserted. A read-only memory card cannot be used with the memory card recorder.</li></ul>
Memory Full	<ul style="list-style-type: none"><li>• The remaining memory capacity of the memory card recorder is insufficient. Erase unnecessary files (page 35), and then perform “Re-Sort by Date,” or insert a new memory card.</li></ul>

Message	Cause/Remedy
File Full	<ul style="list-style-type: none"><li>When there are already the maximum number of files in the selected folder or the total number of files stored on the memory card recorder has exceeded the maximum, you cannot record a new file. Erase unnecessary files (page 35), and then perform “Re-Sort by Date,” or insert a new memory card.</li></ul>
File Damaged	<ul style="list-style-type: none"><li>You cannot play back or edit files, because the data of the selected file is damaged.</li></ul>
Format Error	<ul style="list-style-type: none"><li>Format the memory card using the formatting function in the menu (page 43). Do not use your computer to format the memory card.</li></ul>
Process Error	<ul style="list-style-type: none"><li>Remove and then re-insert the batteries.</li><li>Save a backup copy of your data and format the memory card using the menu (page 43).</li></ul>
No File	<ul style="list-style-type: none"><li>No file is recorded on the memory card.</li></ul>
Low Battery-Cannot Execute	<ul style="list-style-type: none"><li>You cannot use the “Format” function, the “Re-Sort by Date” function or using the ERASE button because the batteries are exhausted. Replace the old LR03 (size AAA) alkaline batteries with new ones (page 13).</li></ul>
Unknown Data	<ul style="list-style-type: none"><li>This data is not in a file format that is supported by the memory card recorder. The memory card recorder supports MP3(.mp3) files only. For details, see “Memory card recorder section” on page 47.</li><li>You cannot play back copyright protected files.</li></ul>
Invalid Operation	<ul style="list-style-type: none"><li>When a memory card has a bad block on it, the card cannot be written to. Prepare a new memory card to replace the current one.</li></ul>


<b>Message</b>	<b>Cause/Remedy</b>
New File	<ul style="list-style-type: none"> <li>The file being recorded has reached the maximum size limit (1 GB). The file will be divided automatically and recording will continue as a new file.</li> </ul>
No Memory Card	<ul style="list-style-type: none"> <li>There is no memory card inserted into the memory card slot. Insert a memory card.</li> </ul>
System Error	<ul style="list-style-type: none"> <li>A system error other than the above has occurred. Remove the batteries and re-insert them.</li> </ul>
No Files Found	<ul style="list-style-type: none"> <li>This memory card recorder cannot perform the “Re-Sort by Date” function because there are no target files.</li> </ul>
Could Not Re-sort Some Files	<ul style="list-style-type: none"> <li>Results of the “Re-Sort by Date” function: some files had not arranged chronologically.</li> </ul>
Could Not Erase Some Files	<ul style="list-style-type: none"> <li>Results of the “Re-Sort by Date” function, some files have not been erased.</li> </ul>
Cannot Erase This File	<ul style="list-style-type: none"> <li>The file cannot be erased because the selected file is a protected file or a read-only file.</li> </ul>
Start Recording	<ul style="list-style-type: none"> <li>No file is recorded on the memory card.</li> </ul>
Check The Volume Level*	<ul style="list-style-type: none"> <li>Please be careful not to listen at an excessive volume.</li> </ul>
Volume Lowered*	<ul style="list-style-type: none"> <li>The volume of the playback sound is lowered automatically if you do not lower the volume for specified period of time after the “Check The Volume Level” message appears.</li> </ul>

\* European model only.



# Display Window Guide

## Display when stopped

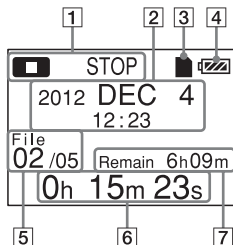

- 1** The status of the memory card recorder
- 2** The recording start date

### Tip

When a file that was recorded on another device is selected, the folder name is displayed on the 1st line and the file name is displayed on the 2nd line.


- 3** Memory card indicator
- 4** Battery indicator
- 5** File information

The number of the recorded file (in the sequence of files that were

recorded on the same day)/Displays the total number of files that were recorded on the same date as the file currently selected.


- 6** The elapsed playback time
- 7** Remaining recording time

## Display when recording

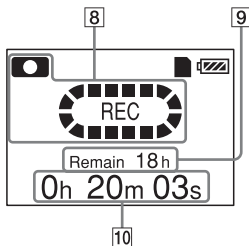


- 8** The status of the memory card recorder
- 9** Remaining recording time
- 10** Elapsed recording time

## Display during playback

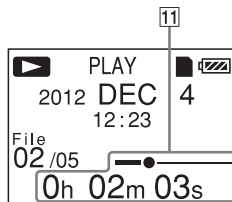

- 11** The elapsed playback time/position bar for the current file

## Display in the HOLD status

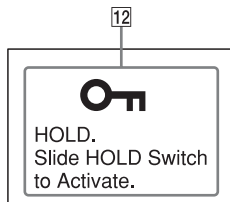

- 12** HOLD indicator
- Appears when the memory card recorder is in the HOLD status to prevent unintentional operations. To release the HOLD status, slide the HOLD•POWER switch towards the center (page 11).

# Index

## A

- Adjusting the volume ..... 31
- Alkaline batteries ..... 13, 49

## B

- Battery life ..... 49
- Battery remain indicator ..... 14

## C

- Cue ..... 32

## D

- Display the current date and time ..... 21

## E

- Erasing ..... 35
- External microphone ..... 27

## H

- HOLD ..... 11
- HOLD•POWER switch ..... 11, 19

## I

- Index to parts and controls
  - Display window ..... 57
  - Front ..... 8

- Rear ..... 10
- Input selection ..... 27, 28, 40, 42
- Inserting batteries ..... 13

## L

- Listening ..... 30

## M

- Maintaining the moderate volume level ..... 12
- Maintenance ..... 45
- Memory card ..... 16, 45
- Menu
  - Beep ..... 40, 42
  - Date&Time ..... 40, 41
  - Format ..... 40, 43
  - Language ..... 40, 42
  - Making settings ..... 38
  - Menu settings ..... 40
  - Re-Sort by Date ..... 40, 41
  - Select Input ..... 40, 42
  - System Information ..... 40, 42
- Message list ..... 54
- MP3 files ..... 47

## **N**

Noise .....	44
-------------	----

## **P**

Precautions .....	44
-------------------	----

## **R**

Rechargeable batteries .....	49
Recording .....	24
Recording from other equipment .....	28
Recording pause .....	26
Recording time .....	49
Recording with other equipment .....	34
Re-Sort by Date .....	40, 41
Review .....	32

## **S**

SD/SDHC memory card .....	16
Setting the clock .....	20, 40, 41
Setting the language .....	22, 40, 42
Specifications .....	47

## **T**

Troubleshooting .....	50
-----------------------	----

<http://www.sony.net/>

© 2011 Sony Corporation